

WORKMANSHIP


TURFSTONE PAVERS BY UNILOCK LIMITED OR APPROVED EQUAL.
 PAVERS SHALL BE INSTALLED IN STRICT ACCORDANCE WITH THE MANUFACTURER'S RECOMMENDATIONS WITH TIGHT BUTT JOINTS OF APPROXIMATELY 3 MM, ON A SAND BASE. SAW CUT PAVERS AS REQUIRED. USE AN APPROVED VIBRATORY COMPACTOR IN A CIRCULAR PATTERN. ALL DAMAGED OR CHIPPED PAVERS MUST BE REPLACED AT THE CONTRACTOR'S COST.

PREPARATION


EXCAVATE AND REMOVE ALL TOPSOIL AND UNSTABLE MATERIALS OFF SITE. SUBGRADE TO BE GRADED TO SIMILAR CONTOURS AS FINISH GRADE. COMPACT SUBGRADE TO 95% SPD. PLACE 150 MM LAYER OF 19 MM CRUSHER RUN LIMESTONE. COMPACT TO 98 % SPD. PLACE MAXIMUM 25 MM UNCOMPACTED SAND FOR LEVELLING COURSE.

INSTALL TURFSTONE UNITS IN THE PATTERN SPECIFIED ON THE PLAN DRAWING OR PER MANUFACTURER'S PATTERN RECOMMENDATION.

ALL MEASUREMENTS ARE IN MILLIMETERS UNLESS NOTED OTHERWISE.

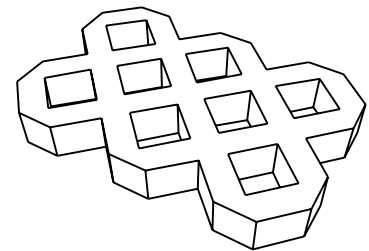

STANDARD TURFSTONE PRECAST UNIT PAVER (600 x 400 x 80)

	<p>PLANNING, DESIGN & DEVELOPMENT DEPARTMENT</p>	<p>TITLE: TURFSTONE UNIT PAVING ON FLAT SURFACE</p>	<p>DRAWING NO. PDD 519</p>
		<p>REVIEWED BY: <i>S.D. [Signature]</i></p>	<p>SCALE: N.T.S.</p>
		<p>APPROVED BY: <i>[Signature]</i></p>	<p>DATE: JANUARY 2007</p>