


FIG. 2 - CONNECTION FOR DOUBLE LUMINAIRE

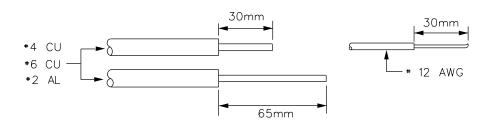

CABLE STRIPPING LENGTHS

NOTE:

- 1. BEND SLIGHTLY TO PREVENT CONDUCTOR FROM SLIDING OUT.
- 2. # 12 NMW WIRE STRIP LENGTH TO SUIT MINI-WEDGE CONNECTOR.
- 3. APPLY SILICON GREASE TO THE INSIDE WALL OF THE RUBBER BOOT FOR EASE OF INSTALLATION.
- 4. RUBBER BOOT MUST BE INSTALLED IN THE VERTICAL POSITION INSIDE THE HANDHOLE.

FOR MAINTENANCE ONLY



C-LOK CONNECTOR INSTALLATION

APPROVED: APRIL 2014

REV. 1

541

STREET LIGHT DETAILS - 500

ORIGINAL: JUNE 2006

N.T.S